


Kelvin Borrow Custom Norton Commando JPN Wiring Diagram - Negative Earth

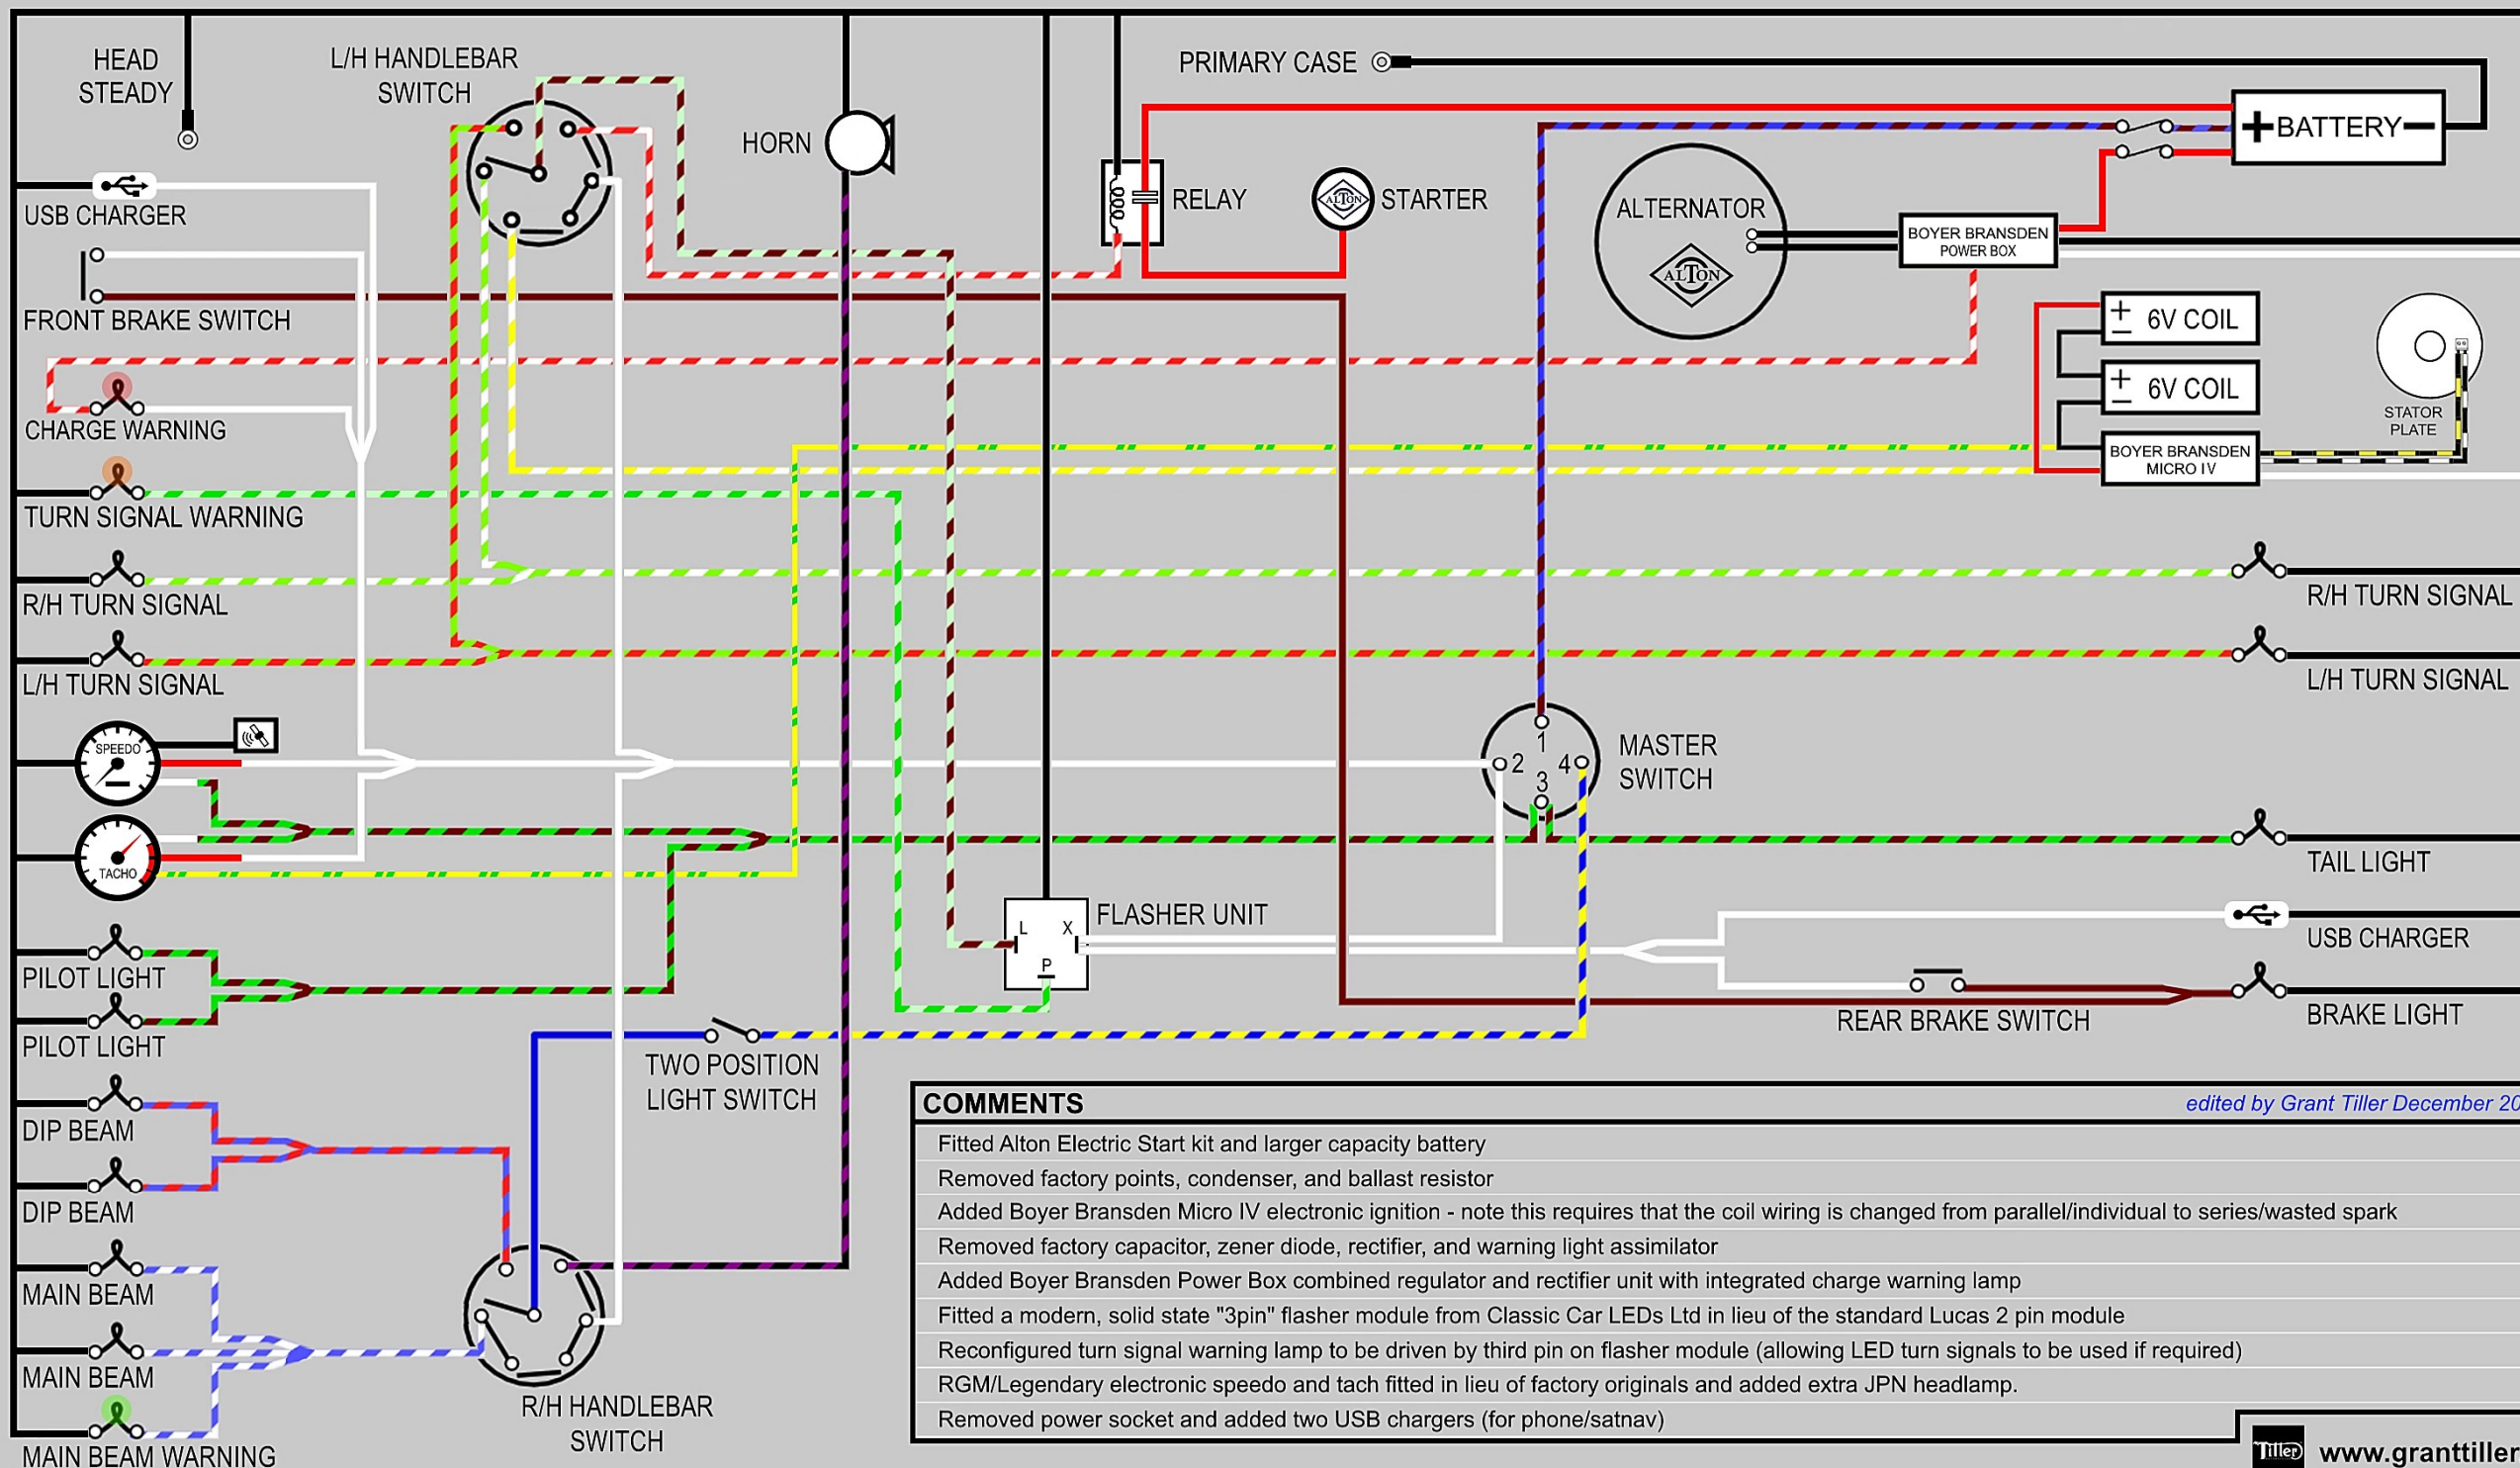

COMMENTS

- Fitted Alton Electric Start kit and larger capacity battery
- Removed factory points, condenser, and ballast resistor
- Added Boyer Bransden Micro IV electronic ignition - note this requires that the coil wiring is changed from parallel/individual to series/wasted spark
- Removed factory capacitor, zener diode, rectifier, and warning light assistor
- Added Boyer Bransden Power Box combined regulator and rectifier unit with integrated charge warning lamp
- Fitted a modern, solid state "3pin" flasher module from Classic Car LEDs Ltd in lieu of the standard Lucas 2 pin module
- Reconfigured turn signal warning lamp to be driven by third pin on flasher module (allowing LED turn signals to be used if required)
- RGM/Legendary electronic speedo and tach fitted in lieu of factory originals and added extra JPN headlamp.
- Removed power socket and added two USB chargers (for phone/satnav)

edited by Grant Tiller December 2023