


Feb 1963 onwards Norton Electra 400cc twin (updated)

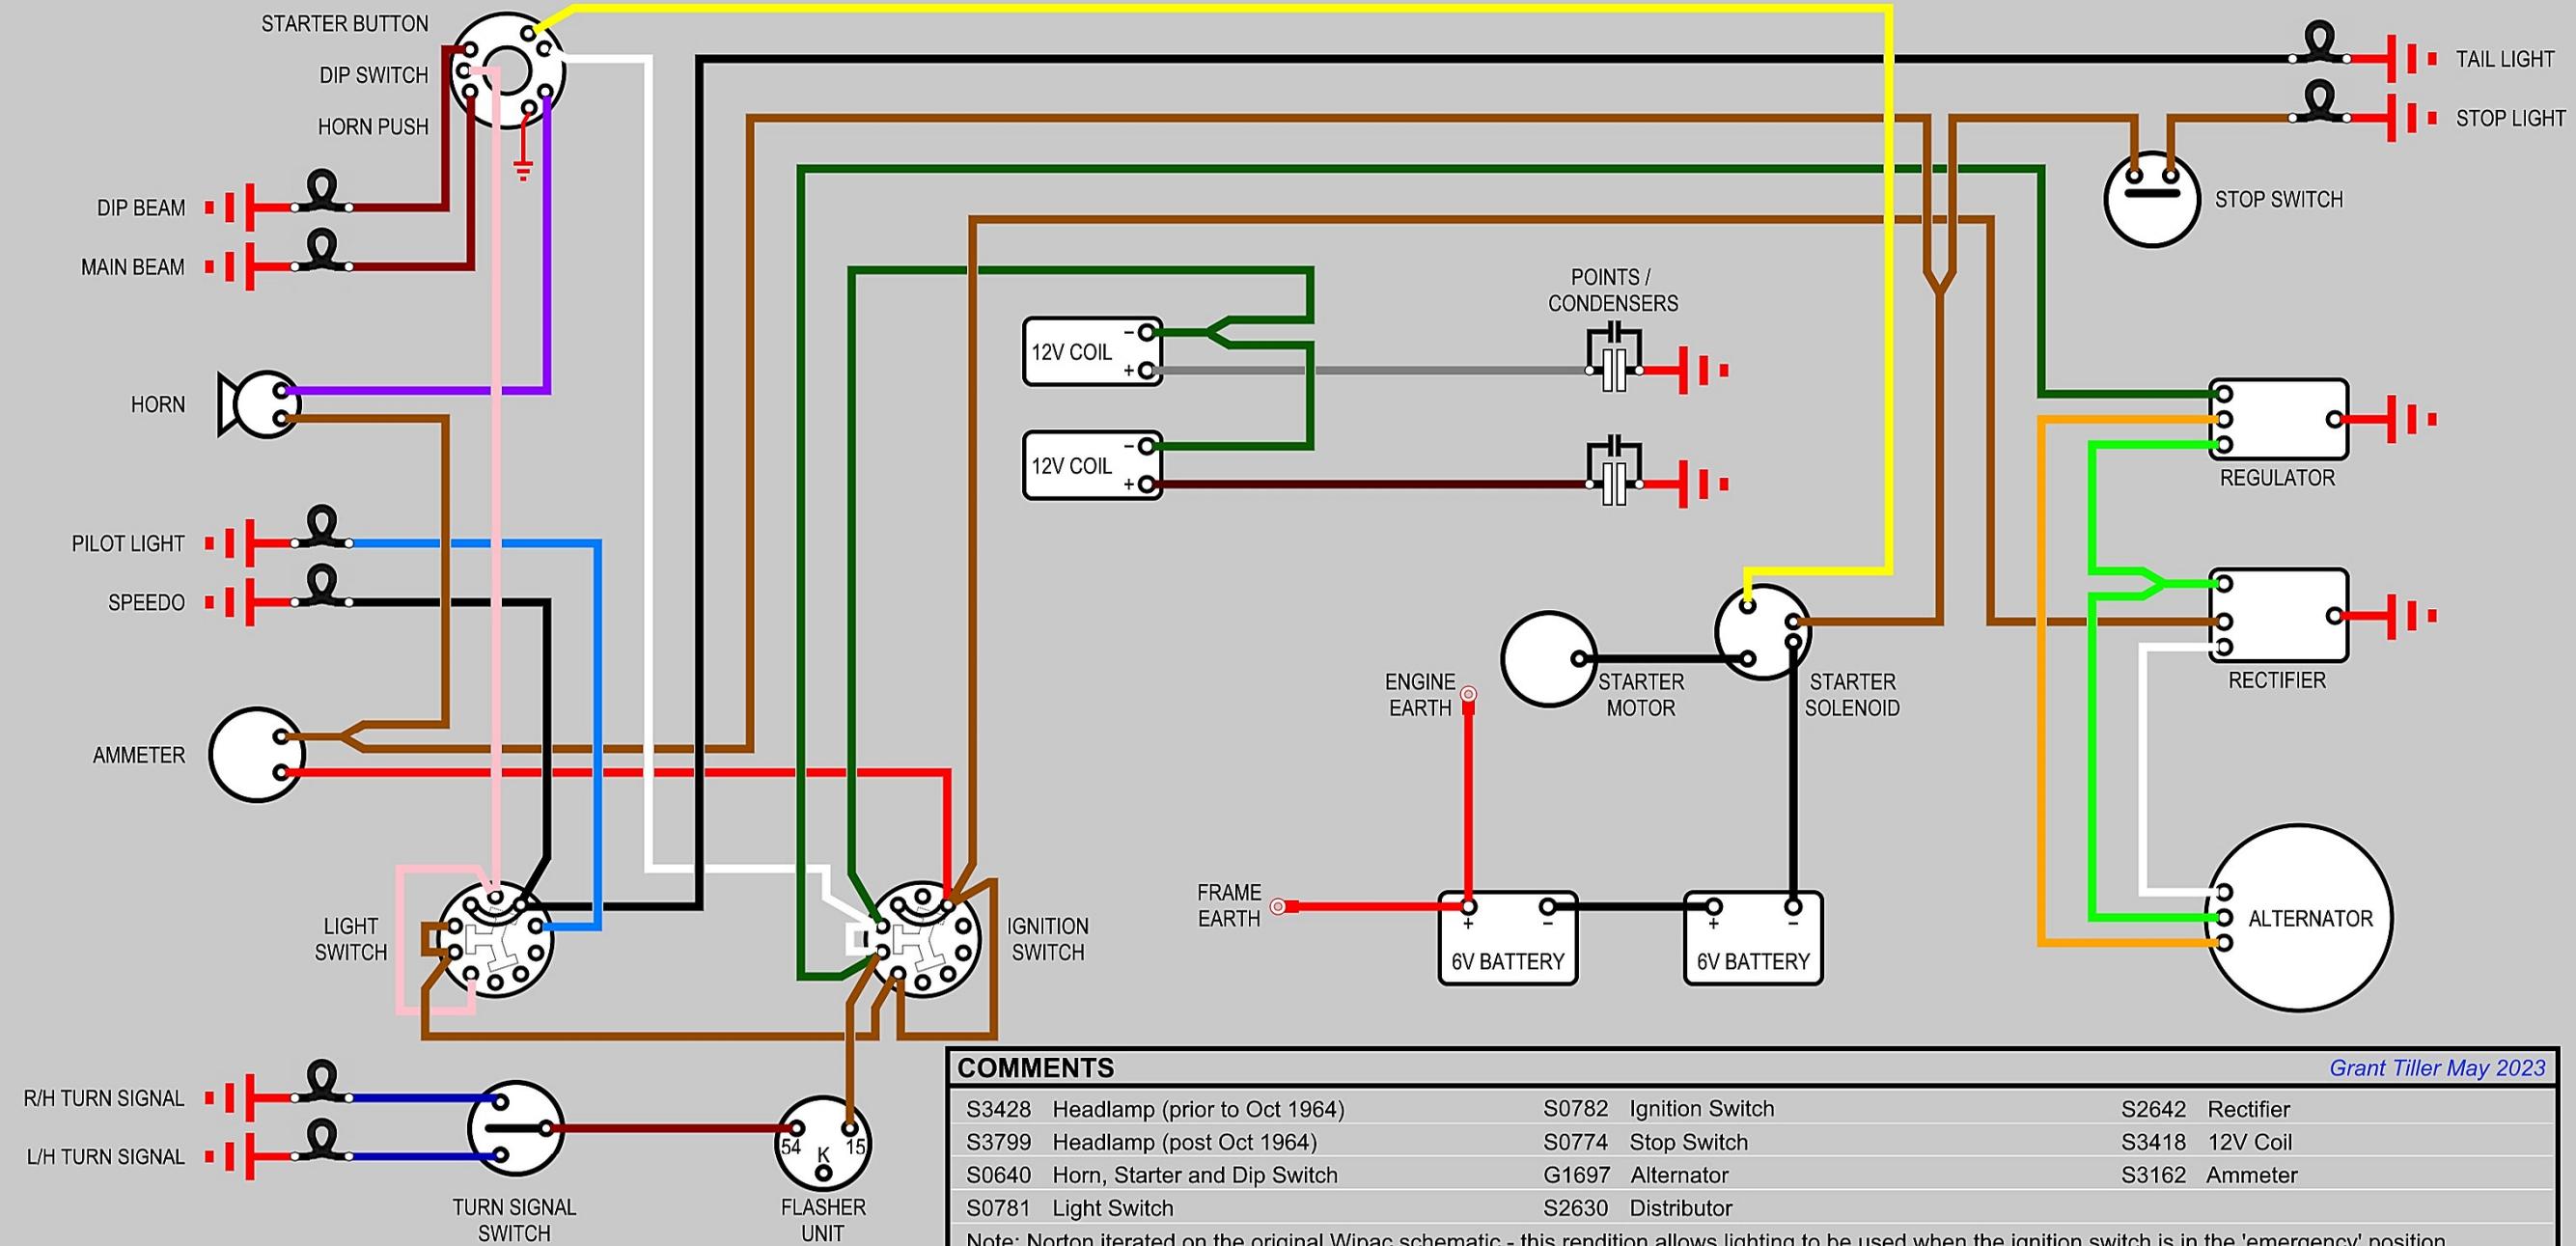

COMMENTS

Grant Tiller May 2023

S3428 Headlamp (prior to Oct 1964)	S0782 Ignition Switch	S2642 Rectifier
S3799 Headlamp (post Oct 1964)	S0774 Stop Switch	S3418 12V Coil
S0640 Horn, Starter and Dip Switch	G1697 Alternator	S3162 Ammeter
S0781 Light Switch	S2630 Distributor	

Note: Norton iterated on the original Wipac schematic - this rendition allows lighting to be used when the ignition switch is in the 'emergency' position

Black	Brown	Dark Red	Light Red	Dark Blue	Light Blue	Dark Green	Light Green	Yellow	Pink	White	Violet	Grey	Maroon	Orange
-------	-------	----------	-----------	-----------	------------	------------	-------------	--------	------	-------	--------	------	--------	--------

Standard wiring is Positive Earth - that is to say the RED (POSITIVE) cable goes FROM the battery TO the frame