


1968 Norton Commando Wiring Schematic + Boyer electronic ignition and Boyer 3 phase reg/rec

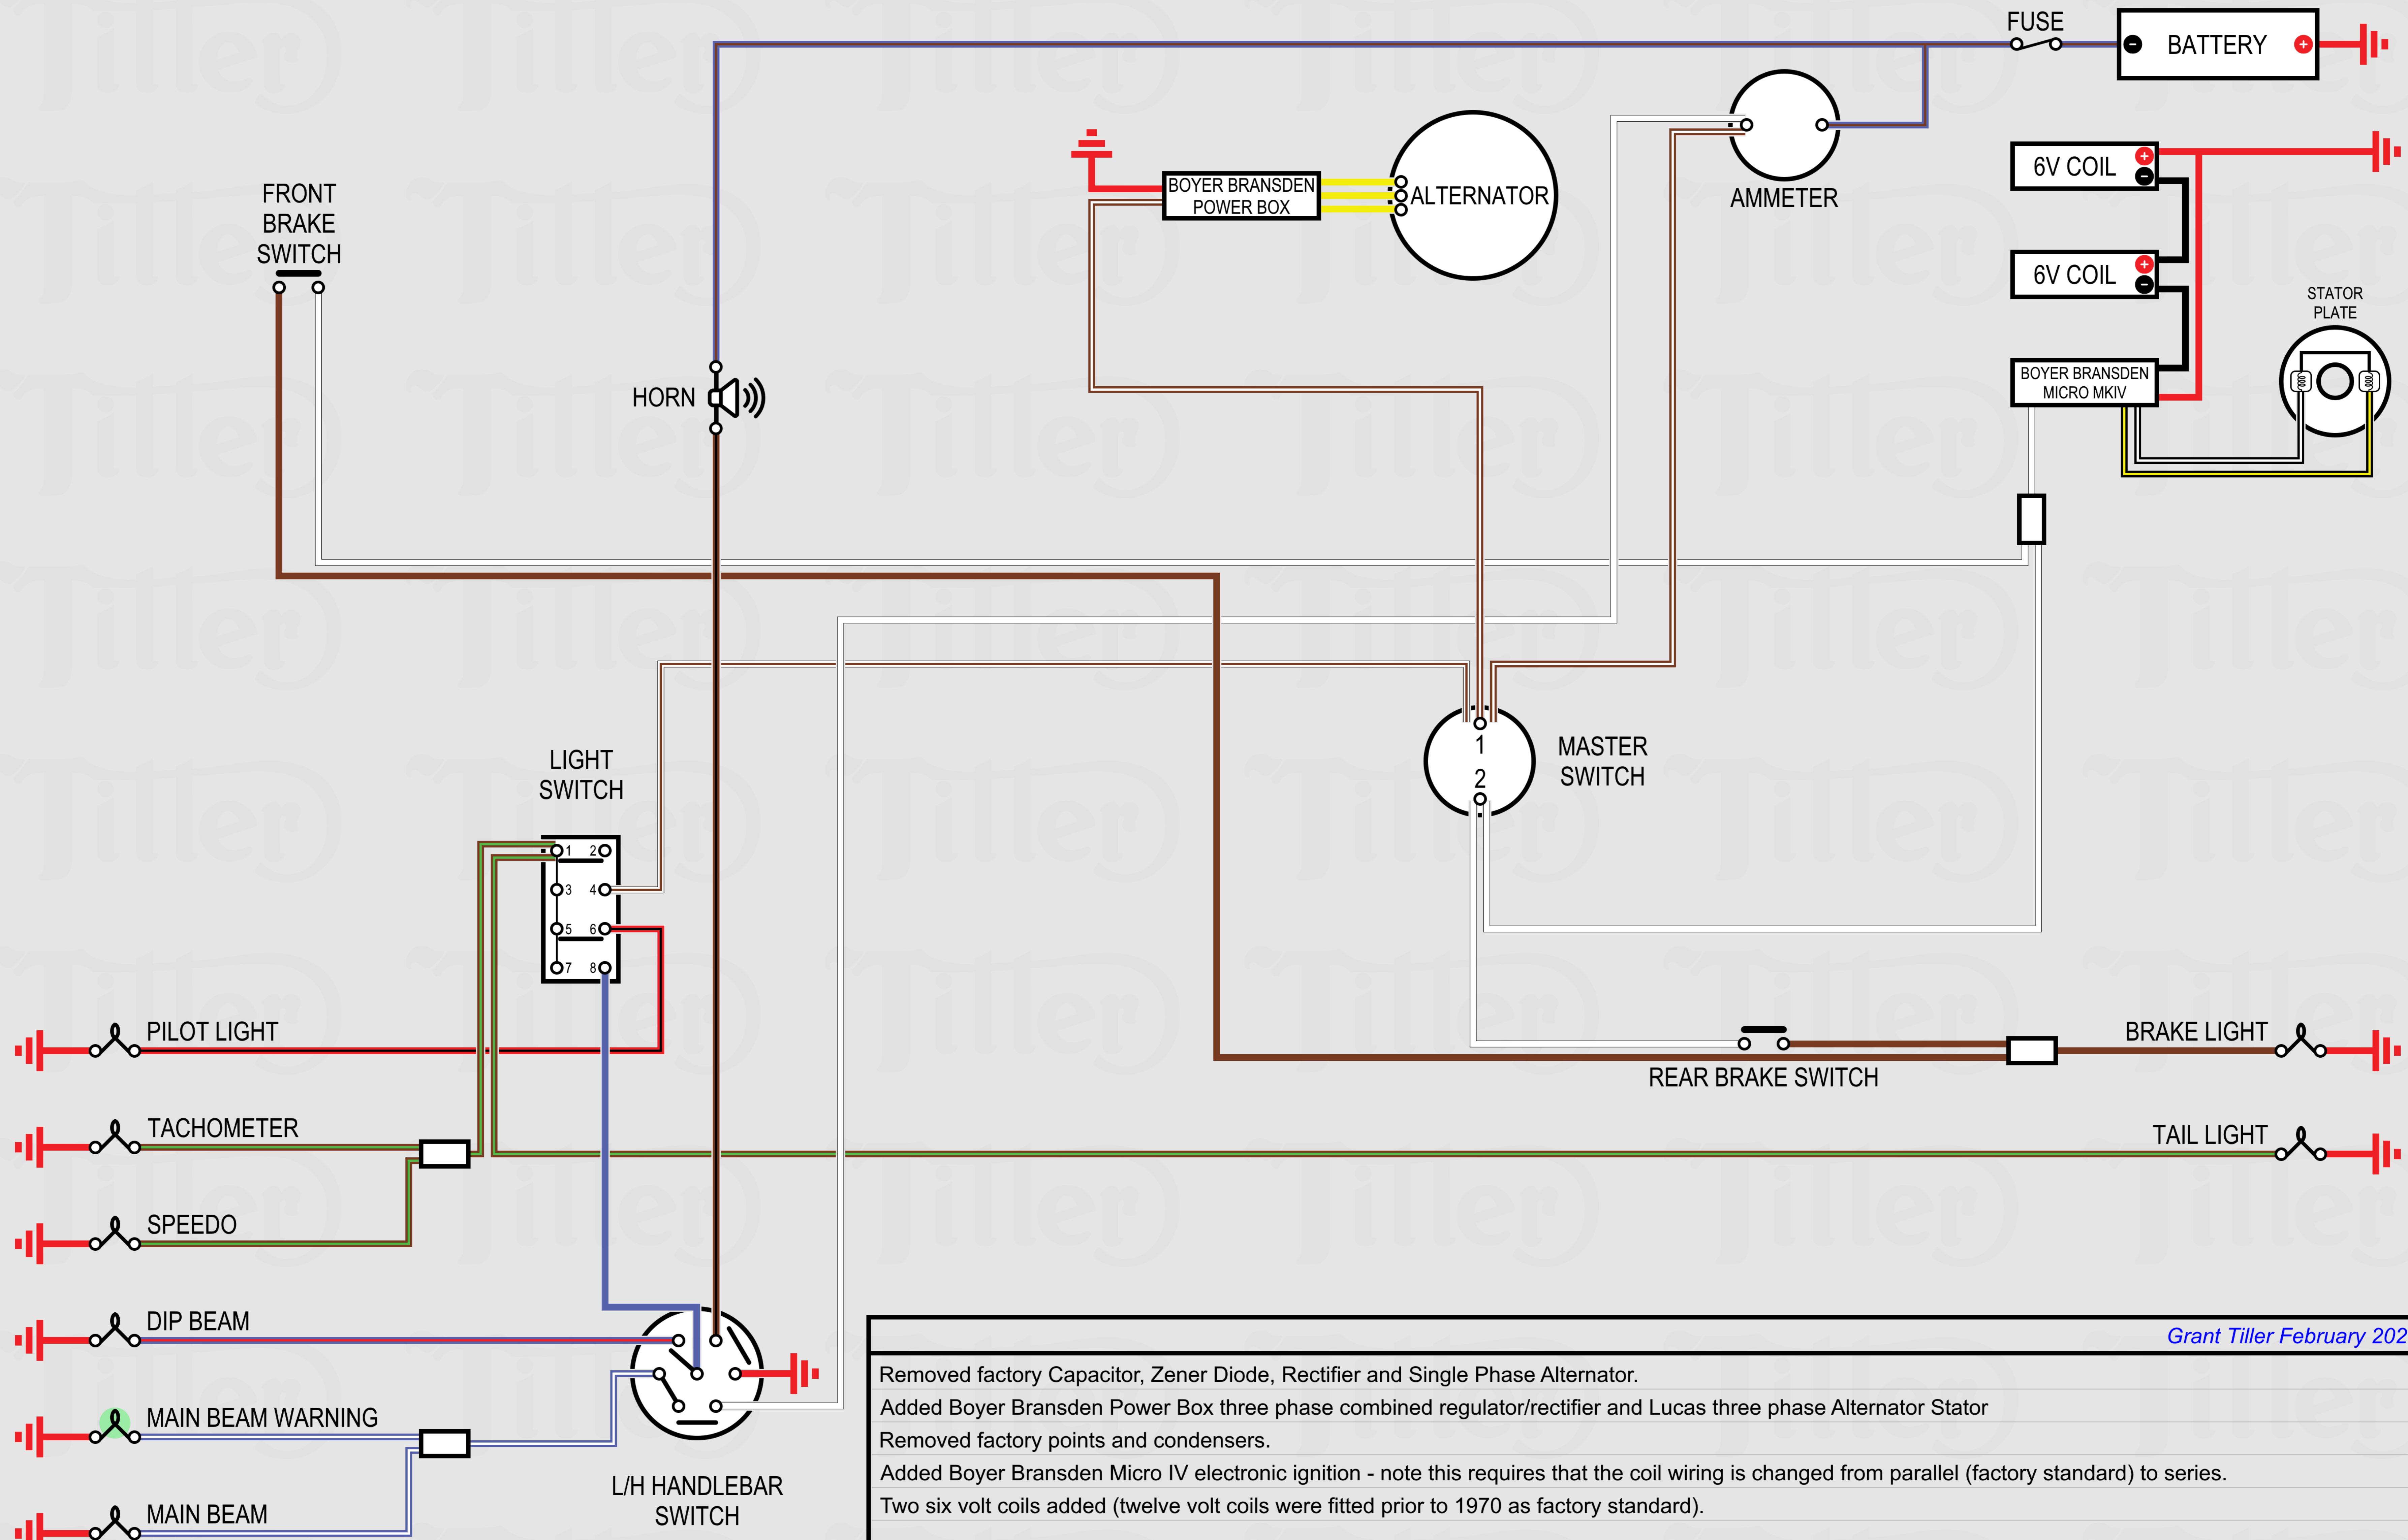

Standard wiring is Positive Earth - that is to say RED (POSITIVE) cable goes FROM the battery TO the frame.